



June Tailor, Inc.

 
 
# Custom Cornice Measuring Instructions

## Tips for getting started:


1. Use only a steel tape measure. A fabric tape measure can stretch.
2. Take measurements at top of window, as not all windows are perfectly square.
3. Measure windows two or three times to ensure accuracy and document.
4. If ordering cornices for multiple windows, make sure to measure each window individually.

## Outside Mount:


1. Measure window width including molding. Maximum available width is 168". (figure 1)
2. Add any additional width desired, especially if hanging curtain panels or sheers under cornice. (figure 2) Round up to the nearest full inch.
3. Cornice returns measure 1-1/4" on each side. Finished front dimension of cornice will measure 2-1/2" wider than your specified width. (figure 3) Please take this into consideration if you have two windows close to each other or windows in a corner.

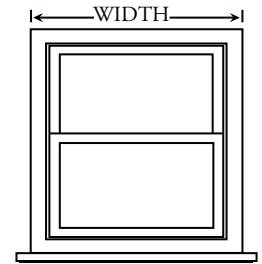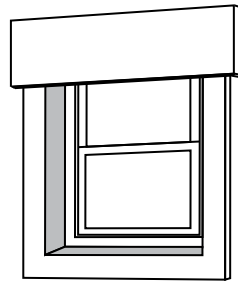

(figure 1)

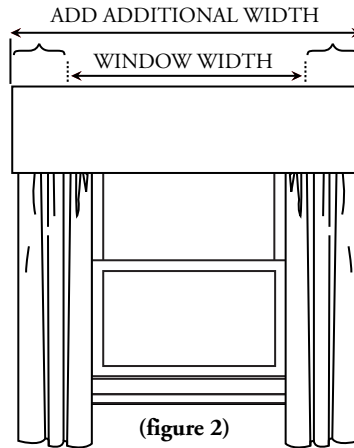 


(figure 2)

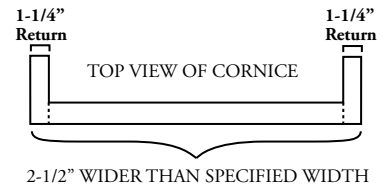 

(figure 3)

## Inside Mount:

 1. Measure the exact width of the window opening at the very top of the casing.
2. Measure the exact width of the window opening either 8" or 12" from top, depending on the desired drop of cornices being ordered.
3. Measure twice and document the smaller dimension, as not all window openings are perfectly square.

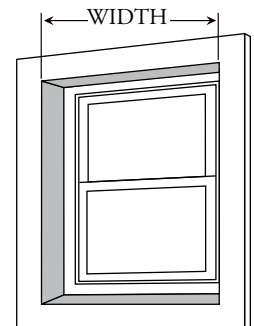

Window	Measurement

June Tailor, Inc.

2861 Highway 175, P.O. Box 208, Richfield, WI 53076 • Phone: 1-800-844-5400 • Fax: 1-262-644-5061